

<div><div>S1-W CCD Bluetooth Barcode Scanner User Manual</div><div></div><div>V2.0</div></div>	<div><div>Bluetooth Pairing - Scanner to cradle</div><div><p>To pair the scanner to the cradle, please connect the cradle to the PC's USB port, make sure the AC adapter is plugged into the base and a power source, and then scan the following barcodes in order:</p><div><div>Step 1:</div><div></div><div>Factory Default</div></div><div><div>Step 2:</div><div></div><div>RF Setting</div></div><div><div>Step 3:</div><div></div><div>Bluetooth Mode</div></div><div><div>Step 4:Code I</div><div></div></div><div><div>Step 5:Code II</div><div></div></div><div><p>Once done, please wait 5-10 seconds for the scanner to finish communicating with the cradle, and then you may begin scanning.</p></div></div></div>	<div><div>Bluetooth Pairing - Scanner to Bluetooth Device</div><div><p>To pair the scanner with another Bluetooth device directly:</p><p>Simply scan code I and II below, in order, then turn on the other device's Bluetooth connectivity, and search for R&B40 (the scanner's Bluetooth ID). Select R&B40 to connect.</p><div><div>I.</div><div></div></div><div><div>II.</div><div></div></div><div><div>Keyboard ON or OFF in iOS mode</div><div></div></div><div><p>Note: In iOS mode, if the keyboard is on, scan this barcode, and the keyboard will turn off. If the keyboard is off, scan this barcode, and the keyboard will turn on.</p><div><div>Scan mode</div><div></div><div>Automatic Successive Scanning</div></div><div><div></div><div>Automatic Saving Scanning</div></div><div><div></div><div>Inventory Mode Scanning</div></div><div><p>Note:</p><p>Automatic successive scanning: can not save data out of range.</p><p>Automatic saving scanning: can save data out of range.</p></div></div></div></div>	<div><p>In Inventory Mode, all scanned data will be saved to the scanner, and will not be uploaded to the host device until one of the following transmission codes is scanned.</p><div><div>Data Process Under Inventory Mode Scanning</div><div><div></div><div>Upload All Data</div></div><div><div></div><div>Upload New Data</div></div><div><div></div><div>Display Number of Stored Scans</div></div><div><div></div><div>Display Number of Scans Not Yet Uploaded</div></div><div><div></div><div>Clear All Data</div></div><div><div>Scanning mode</div><div><div></div><div>Manual</div></div><div><div></div><div>Auto-Continuous Scanning Mode</div></div><div><div></div><div>Auto-Flashing Mode</div></div></div></div></div>	<div><div>Keyboard Caps Lock Control</div><div><div></div><div>Capitalize</div></div><div><div></div><div>Lower Case</div></div><div><div></div><div>Case Swap</div></div><div><div></div><div>None</div></div><div><div>Buzzer</div><div><div></div><div>Sounds OFF</div></div><div><div></div><div>Sounds ON</div></div><div><div></div><div>Sound Lower</div></div><div><div></div><div>Sound Louder</div></div></div><div><div>Standard & Reversed Setting</div><div><div></div><div>Standard Barcodes</div></div><div><div></div><div>Reversed Barcodes</div></div></div></div>
--	---	---	--	---

<div><div>Suffix Setting</div><div><div></div><div>Enter</div></div><div><div></div><div>Enter+LF</div></div><div><div></div><div>None</div></div><div><div>Keyboard Language</div><div><div></div><div>USA</div></div><div><div></div><div>Germany</div></div><div><div></div><div>France</div></div></div><div><div>Barcode Enable & Disable</div><div><div></div><div>Enable Code 39</div></div><div><div></div><div>Disable Code 39</div></div><div><div></div><div>Enable UPC-A</div></div></div></div>	<div><div><div></div><div>Disable UPC-A</div></div><div><div></div><div>Enable UPC-E</div></div><div><div></div><div>Disable UPC-E</div></div><div><div></div><div>Enable EAN-13</div></div><div><div></div><div>Disable EAN-13</div></div><div><div></div><div>Enable EAN-8</div></div><div><div></div><div>Disable EAN-8</div></div><div><div></div><div>Enable Code 93</div></div><div><div></div><div>Disable Code 93</div></div><div><div></div><div>Enable Code 128</div></div><div><div></div><div>Disable Code 128</div></div></div>	<div><div><div></div><div>Enable codabar</div></div><div><div></div><div>Disable codabar</div></div><div><div></div><div>Enable interleaved 2 of 5</div></div><div><div></div><div>Disable interleaved 2 of 5</div></div><div><div></div><div>Enable industrial 2 of 5</div></div><div><div></div><div>Disable industrial 2 of 5</div></div><div><div></div><div>Enable MSI code</div></div><div><div></div><div>Disable MSI code</div></div><div><div></div><div>Enable Plessey</div></div><div><div></div><div>Disable Plessey</div></div><div><div></div><div>Enable Code 11</div></div></div>	<div><div><div></div><div>Disable Code 11</div></div><div><div></div><div>Enable matrix 2 of 5</div></div><div><div></div><div>Disable matrix 2 of 5</div></div><div><div></div><div>Enable postal 2 of 5</div></div><div><div></div><div>Disable postal 2 of 5</div></div><div><div></div><div>Enable aerial 2 of 5</div></div><div><div></div><div>Disable aerial 2 of 5</div></div><div><div></div><div>Enable GS1 omnidirectional</div></div><div><div></div><div>Disable GS1 omnidirectional</div></div><div><div></div><div>Enable GS1 limited</div></div><div><div></div><div>Disable GS1 limited</div></div></div>	
--	---	--	---	--